How To Configure Internet, Voice And Wifi In Richerlink Dual Band Onu

- 1 Connect Lan Cable From Onu To Laptop and Open Onu With 192.168.1.1
- 2 Id: admin
- 3 Password:- ONU@xxxx (xxxx is last 4 digit of Onu Mac Address In Small)

Ric I		Link E	
Username:			
Password:			
xm66e		Refresh	
Validate Code:			
	Login		


1 After Login Click On Network.

- 2- Click On Add button And Choose Internet In Service Option.
- 3- Select Link Mode PPPOE/IPOE
- 4- Give PPPOE Id password, If there Is Any Vlan, Change Vlan mode to tag and give the Vlan Id
- 5- Click On Apply And Save The Settings

	<b>Status</b>	Network	+ Security	Applicatio	င့်လြှ n Managemen	U. nt Diagnosis
	WAN Binding	LAN Qo	os wlan	WLAN5G CW	/MP Time Ro	outing
WAN Configuration	WAN Interfa	ace:	Add WAN inter	face 🗸		Add
	Mode:		Route	~	Enable: 🗹	
	Service:		INTERNET	~		
	Binding Opt	C		N2 ID2 SSID3 SS SSIDAC2 SSIDAC		
	Enable DHC	P Server:	2			
	Link Mode:		IPoE	~		
	IP Protocol:	(	■IPv4 ○IPv6	O IPv4/IPv6		
				address automatica	lly from ISP.	
	○ Static	c	onfigure a stati	c ip from ISP.		
	VLAN Mode	:: [	TRANSPARENT	~		
	Multicast VL 4094]:	AN ID[1-				
	MTU[576-15	500]:	1500			
	Enable NAT	:	2			

1 Click On Status and Select WAN.

2 If Showing Connected and ip address here, it means the onu is connected with internet 3- Internet led will also Up on ONU

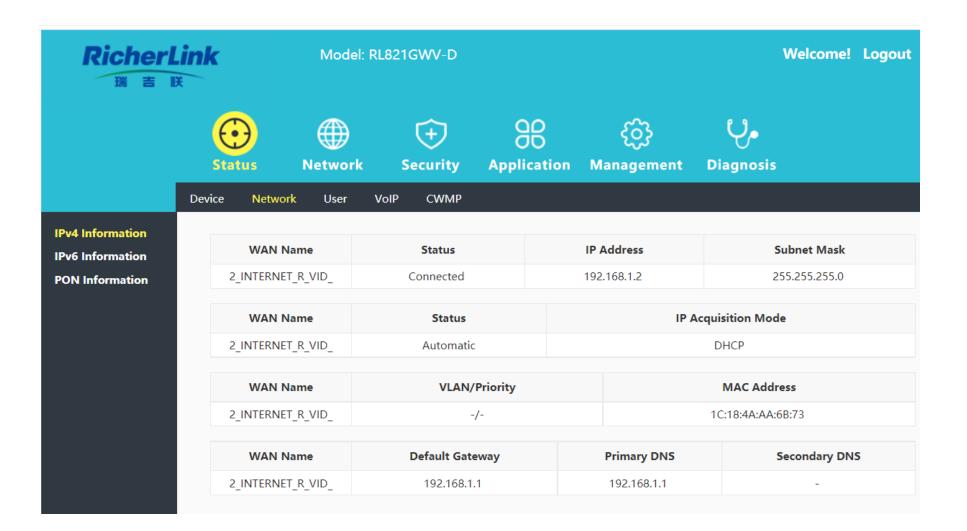

1- For Voice, Click On Network.

2- Click On Add button And Choose Voice In Service Option.

3- Select Link Mode PPPOE/IPOE

4 Give PPPOE/DHCP, Id passwo, If there Is Any Vlan, Change Vlan mode to tag and give the Vlan Id

5 Click On Apply And Save The Settings

Richerl <sup>III</sup> = I		Mode	I: RL821GWV-D			Welcome	! Logout
	<b>Status</b>	Networ	+ k Security	Application	දිරි Management	<b>ပုံ့</b> Diagnosis	
	WAN Binding	LAN	QoS WLAN	WLAN5G CWMF	Time Rout	ing	
WAN Configuration	WAN Interf	ace:	3_VOICE_R_VID_	1849 🗸		Add	
	Mode:		Route	✓ Enal	ole: 🗹		
	Service:		VOICE	~			
	Link Mode:		IPoE	~			
	IP Protocol:		O IPv4 ○ IPv6	O IPv4/IPv6			
	DHCP		get a dynamic ip	address automatically f	rom ISP.		
	○ Static		configure a static	ip from ISP.			
	VLAN Mode	:	TAG	~			
	VLAN ID[1-	4094]:	1849				
	802.1p[0-7]	:	Enable				
	MTU[576-1	500]:	1500				
	Delete						
				Apply	ancel		

1- Click On Application and Click Voip.

Basic C

Advand Config

- 2- Give Sip server Ip , (if don't know ask to your service provider)
- 3- Give Telephone id and Password, Click Apply
- 4- Status/Voip It show registered ,also it will show Fx light on Onu

	Status Network Secu		လြို Manageme	nt Diagnosis	VoIP Voice Coding Co Coding and Dee	-	Enable	Packi	ng time(ms)	Pr	iority(1-5)
	DDNS Advanced NAT UPnP VoIP	IGMP Family Sto	prage		G.711 a	-law		20	~	1	~
nfiguration		,,			G.711 u	ı-law		20	~	2	~
onfiguration ed	Basic Configuration				G.72	9		20	~	3	~
ration	Protocol:	SIP	✓ Please	e restart if you change the voice protocol.	G.72	2		20	~	4	~
	Outbound Proxy Server Address:		(IP/Domain nar	ne)	User Basic Parameter						
	Outbound Proxy Server Port:	5060	(1-65535)		Number 1	Register	Username	Authe	enticate Username	P	assword
	Secondary Outbound Proxy Server:		(IP/Domain nar	ne)	Apply	Cancel					
	Secondary Outbound Proxy Server Port:	5060	(1-65535)								

- 1- For wifi Go To Network and Click WLAN 2.4G or 5G
- 2- in SSID Give the name which you want
- 3- In Pre Shared key give the wifi password
- 4- Click on Apply To Save the changes
- 5- Check Wifi name In Your Mobile And Laptop

RicherLink Mod 瑞吉联		Model:	RL821GWV-D				Welcome!	Logout
	<b>Status</b>	Network	+ Security	Application	ද <u>ි</u> රි Management	<b>V</b> o Diagnosis		
	WAN Binding	LAN	QoS WLAN	WLAN5G CWM	P Time Routi	ng		
WLAN Configuration Shared Configuration	Enable WL	AN 🔽	1					
<u> </u>	Mode:	٤	302.11b/g/n mixed	~				
	Channel:	ł	Auto	~				
	Transmittir	ng Power: 1	00%	~				
	SSID Index	: 5	SSID1	~				
	SSID:	S	SID1-2.4G					
	Channel W	'idth: 2	20/40	✓ MHZ				
	Extension	Channel:	Jpward	~				
	Rate:	4	Auto	~				